



# Installation / User Manual

## APsystems YC250/YC500 Photovoltaic Grid-connected Microinverter

Rev 3.3

ALTENERGY POWER SYSTEM Inc.  
WEB: [www.APsystems.com](http://www.APsystems.com)

APsystems Shanghai  
Rm.B403, No.188 Zhangyang Road, Pudong, Shanghai 200120, P.R.C  
TEL: 021-33928205 EMAIL: [info@altenergy-power.com](mailto:info@altenergy-power.com)

# Table of Contents

<b>Important Safety Instructions.....</b>	<b>2</b>
Safety Instructions.....	2
Radio interference statement.....	3
<b>APsystems Microinverter System Introduction.....</b>	<b>4</b>
<b>APsystems Microinverter M1P Series Introduction.....</b>	<b>6</b>
<b>APsystems Microinverter System Installation.....</b>	<b>7</b>
Additional Installation components from APsystems.....	7
Required Parts and Tools from you.....	7
Installation Procedures.....	8
Step 1 - Installing the AC Branch Circuit Junction Box.....	8
Step 2 - Attaching the APsystems Microinverters to the Racking or the PV Module Frame.....	9
Step 3 - Connecting the APsystems Microinverter AC Cables.....	10
Step 4 - Connecting APsystems Microinverters to the PV Module.....	11
Step 5 - Completing the APsystems Installation Map.....	12
<b>APsystems microinverter system operating instructions.....</b>	<b>14</b>
<b>Troubleshooting.....</b>	<b>15</b>
Status Indications and Error Reporting.....	15
Start up LED.....	15
Operation LED.....	15
Other Faults.....	15
Troubleshooting a non-operating APsystems Microinverter.....	16
<b>Replace a microinverter.....</b>	<b>17</b>
<b>Technical Data.....</b>	<b>18</b>
APsystems YC250A/I Microinverter Datasheet.....	19
APsystems YC500A/I Microinverter Datasheet.....	20
<b>Wiring Diagram.....</b>	<b>21</b>
Sample Wiring Diagram - 127V Single Phase.....	21
Sample Wiring Diagram - 220V Single Phase.....	22
Sample Wiring Diagram - 110V/220V Split Phase.....	23
Sample Wiring Diagram - 127V/220V Three Phase.....	24

# Important Safety Instructions

This manual contains important instructions to follow during installation and maintenance of the APsystems Photovoltaic Grid-connected Inverter (Microinverter). To reduce the risk of electrical shock and ensure the safe installation and operation of the APsystems Microinverter, the following symbols appear throughout this document to indicate dangerous conditions and important safety instructions.

**SAVE THESE INSTRUCTIONS!** *This manual contains important instructions for models YC250A/YC250I, YC500A/YC500I that must be followed during Installation and maintenance of the Photovoltaic Grid-connected Inverter.*

Specifications subject to change without notice - please ensure you are using the most recent update found at [www.APsystems.com](http://www.APsystems.com)

---

**WARNING:** This indicates a situation where failure to follow instructions may cause a serious hardware failure or personnel danger if not applied appropriately. Use extreme caution when performing this task.

---



**WARNING  
SYMBOL**

---

**NOTE:** This indicates information that is important for optimized microinverter operation. Follow these instructions closely.

---



**NOTE  
SYMBOL**

## Safety Instructions

- ✓ **Do NOT** disconnect the PV module from the APsystems Microinverter without first disconnecting the AC power.
- ✓ Only qualified professionals should install and/or replace APsystems Microinverters.
- ✓ Perform all electrical installations in accordance with local electrical codes.
- ✓ Before installing or using the APsystems Microinverter, please read all instructions and cautionary markings in the technical documents and on the APsystems Microinverter system and the solar-array.
- ✓ Be aware that the body of the APsystems Microinverter is the heat sink and can reach high temperatures. To reduce risk of burns, do not touch the body of the Microinverter.
- ✓ **Do NOT** attempt to repair the APsystems Microinverter. If it fails, contact APsystems Customer Support to obtain an RMA number and start the replacement process. Damaging or opening the APsystems Microinverter will void the warranty.

## Radio interference statement

FCC Compliance: The equipment can comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules, which are designed to protect against harmful interference in a residential installation. The equipment could radiate radio frequency energy and this might cause harmful interference to radio communications if not following the instructions when installing and using the equipment. But there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, the following measures might resolve the issues:

- A) Relocate the receiving antenna and keep it well away from the equipment.
- B) Consult the dealer or an experienced radio/TV technical for help.

Changes or modifications not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

# APsystems Microinverter System Introduction

The Apsystems Microinverter is used in utility-interactive grid-tied applications, comprised of three key elements:

- Apsystems Microinverter
- Apsystems Energy Communication Unit (ECU)
- Apsystems Energy Monitor and Analysis (EMA) web-based monitoring and analysis system

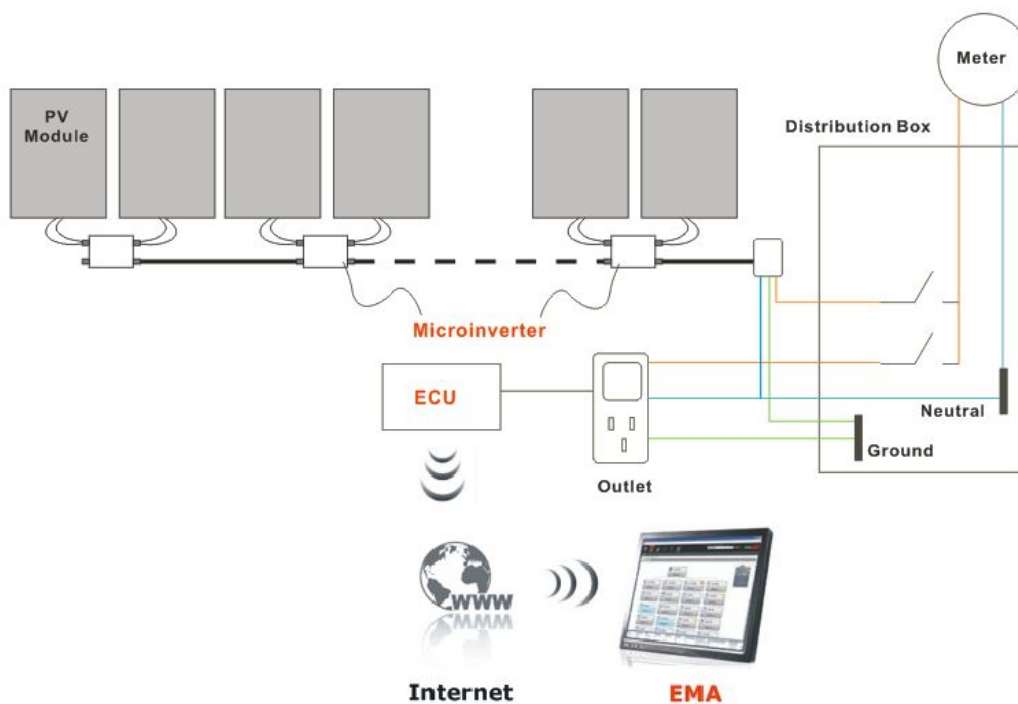


Figure 1

# APsystems Microinverter System Introduction

This integrated system improves safety; maximizes solar energy harvest; increases system reliability, and simplifies solar system design, installation, maintenance, and management.

## APsystems Microinverters maximize PV energy production

Each PV module has individual Maximum Peak Power Tracking (MPPT) controls, which ensures that the maximum power is exported to the utility grid regardless of the performance of the other PV modules in the array. When PV modules in the array are affected by shade, dust, orientation, or any situation in which one module underperforms compared with the other units, the APsystems Microinverter ensures top performance from the array by maximizing the performance of each module within the array.

## More reliable than centralized or string inverters

The distributed APsystems Microinverter system ensures that no single point of system failure exists across the PV system. APsystems Microinverters are designed to operate at full power at ambient outdoor temperatures of up to 149°F (65°C). The inverter housing is designed for outdoor installation and complies with the NEMA 6 environmental enclosure rating.

## Simple to install

You can install individual PV modules in any combination of module quantity, orientation, type, and power rate.

**For 127V situation, the Ground wire (PE) of the AC cable is connected to the chassis inside of the Microinverter, eliminating the installation of grounding wire.**

**For 220V situation, the Ground wire is installed outside of the Microinverter.** As the following figures:

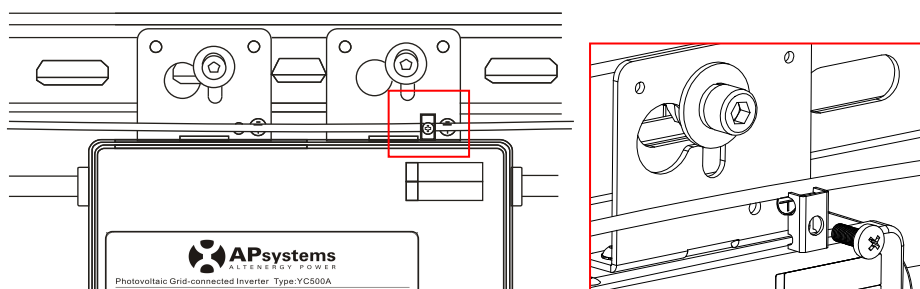


Figure 2

**NOTE:** If you already use grounding washers to ground the microinverter chassis to the PV module racking as described in step 2, skip this step



## Smart system performance monitoring and analysis

The APsystems Energy Communication Unit (ECU) is installed by simply plugging it into any wall outlet and providing an Ethernet or Wi-Fi connection to a broadband router or modem. After installing the ECU, the full network of APsystems Microinverters automatically reports to the APsystems Energy Monitor and analysis (EMA) web server. The EMA software displays performance trends, informs you of abnormal events, and controls system shutdown when it is needed. (See ECU manual for instructions.)

# APsystems Microinverter M1P Series Introduction

The APsystems M1P series Microinverters connect with the Split-phase grid, and operate with most 60 and 72 cell PV modules. For more information, please see the Technical Data page (p.18) of this manual, or sign in APsystems website to obtain a solar panel list which can match with APsystems Microinverters: [www.APsystems.com](http://www.APsystems.com)

Model Number	AC grid	PV Module	Module Connector
YC250A	60Hz/127V	60,72 Cell	MC-4 Type or Customize
YC250I	60Hz/127V	60,72 Cell	MC-4 Type or Customize
YC500A	60Hz/127V	60,72 Cell	MC-4 Type or Customize
YC500I	60Hz/127V	60,72 Cell	MC-4 Type or Customize
YC250A	60Hz/220V	60,72 Cell	MC-4 Type or Customize
YC250I	60Hz/220V	60,72 Cell	MC-4 Type or Customize
YC500A	60Hz/220V	60,72 Cell	MC-4 Type or Customize
YC500I	60Hz/220V	60,72 Cell	MC-4 Type or Customize

Max. units per branch of YC250A/YC250I for 127V situation:  
Maximum parallel combination of modules 10 per branch for 25A breaker.  
Maximum parallel combination of modules 8 per branch for 20A breaker.

Max. units per branch of YC500A/YC500I for 127V situation:  
Maximum parallel combination of modules 5 per branch for 25A breaker.  
Maximum parallel combination of modules 4 per branch for 20A breaker.

Max. units per branch of YC250A/YC250I for 220V situation:  
Maximum parallel combination of modules 17 per branch for 25 A breaker.  
Maximum parallel combination of modules 14 per branch for 20 A breaker.

Max. units per branch of YC500A/YC500I for 220V situation:  
Maximum parallel combination of modules 8 per branch for 25 A breaker.  
Maximum parallel combination of modules 7 per branch for 20 A breaker

# APsystems Microinverter System Installation

A PV system using Apsystems Microinverters is simple to install. Each Microinverter easily mounts on the PV racking, directly beneath the PV module(s). Low voltage DC wires connect from the PV module directly to the Microinverter, eliminating the risk of high DC voltage. Installation **MUST** comply with local regulations and technical rules.

*Special Statement! An AC GFCI device **should not** be used to protect the dedicated circuit to the Apsystems microinverter even though it is an outside circuit. None of the small GFCI devices (5mA-30 mA) are designed for back feeding and will be damaged if back feed. In a similar manner, AC AFCIs have not been evaluated for back feeding and may be damaged if back feed with the output of a PV inverter.*

---

**WARNING:** Perform all electrical installations in accordance with localelectrical codes.

---

---

**WARNING:** Be aware that only qualified professionals should install and/or replace Apsystems Microinverters.

---

---

**WARNING:** Before installing or using an Apsystems Microinverter, please read all instructions and warnings in the technical documents and on the Apsystems Microinverter system itself as well as on the PV array.

---

---

**WARNING:** Be aware that installation of this equipment includes the risk of electric shock.

---

---

**WARNING:** Do not touch any live parts in the system, including the PV array, when the system has been connected to the electrical grid.

---

---

**NOTE:** Strongly recommend to install Surge protection Devices in the dedicated meter box.

---



## Additional Installation components from Apsystems

- AC branch end cable (1 per branch, sold separately)
- Protective end cap (1 per branch, sold separately)

## Required Parts and Tools from you

In addition to your PV array and its associated hardware, you will need the following items:

- An AC connection junction box
- Mounting hardware suitable for module racking
- Sockets and wrenches for mounting hardware
- Continuous grounding conductor and grounding washers
- A Phillips screwdriver
- A torque wrench



# Installation Procedures

APsystems Microinverters are designed to only operate when they can sense power coming from the grid. Even if they are plugged into the solar array, they will not turn themselves on until they can read power from the grid.

**WARNING:** Do NOT connect APsystems Microinverters to the utility grid or energize the AC circuit until you have completed all of the installation procedures as described in the following sections.

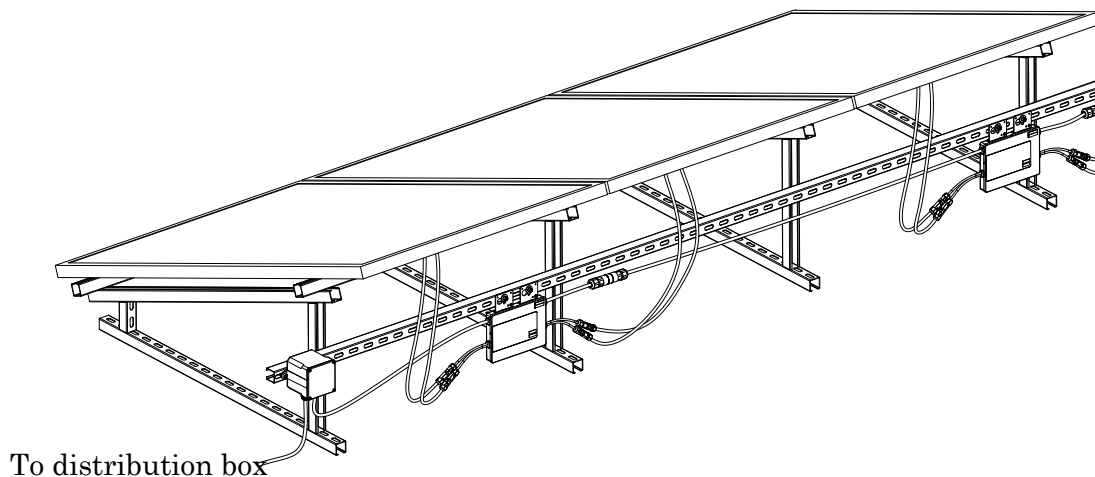


Figure 3

## Step 1 - Installing the AC Branch Circuit Junction Box

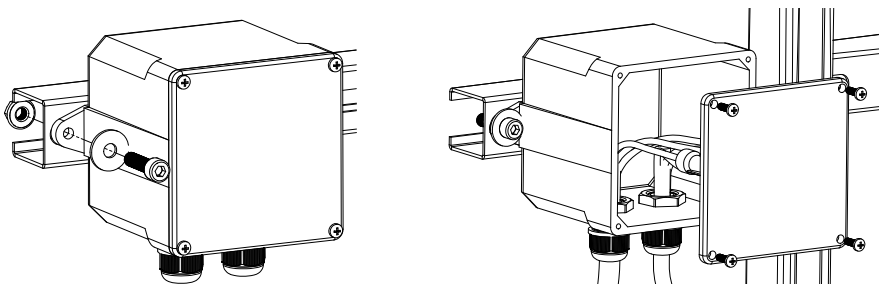


Figure 4

- Install an appropriate junction box at a suitable location on the PV racking system (typically at the end of a branch of modules).
- Connect the open wire end of the AC branch end cable into the junction box using an appropriate gland or strain relief fitting.
- Wire the conductors according to the marks on cable core.
- Connect the AC branch circuit junction box to the point of utility interconnection.

# Installation Procedures

## Step 2 - Attaching the APsystems Microinverters to the Racking or the PV Module Frame

- Mark the location of the Microinverter on the rack, with respect to the PV module junction box or any other obstructions.
- Mount one Microinverter at each of these locations using hardware recommended by your module racking vendor.
- GROUNDING WASHER:** If using the appropriate grounding washer (check with a licensed electrician), attach the grounding washer between the frame and the Microinverter.

Option 1:

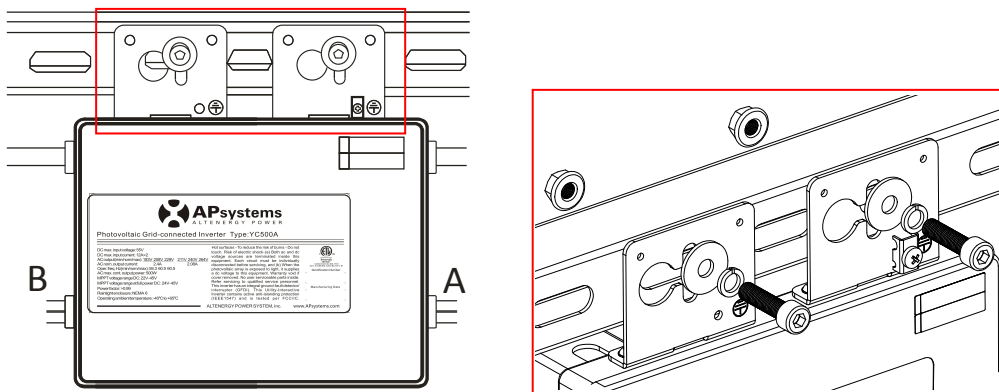


Figure 5

Option:2

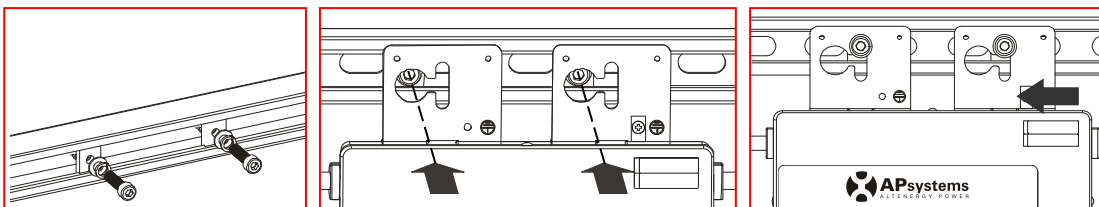


Figure 6

**WARNING:** Prior to installing any of the microinverters, verify that the utility voltage at the point of common connection matches the voltage rating on microinverter label.



**WARNING:** Do not mount the Microinverter in a location that allows exposure to direct sunlight. Allow a minimum of 3/4" (1.5cm.) between the roof and the bottom of the Microinverter to allow proper air flow.



# Installation Procedures

## Step 3 - Connecting the APsystems Microinverter AC Cables

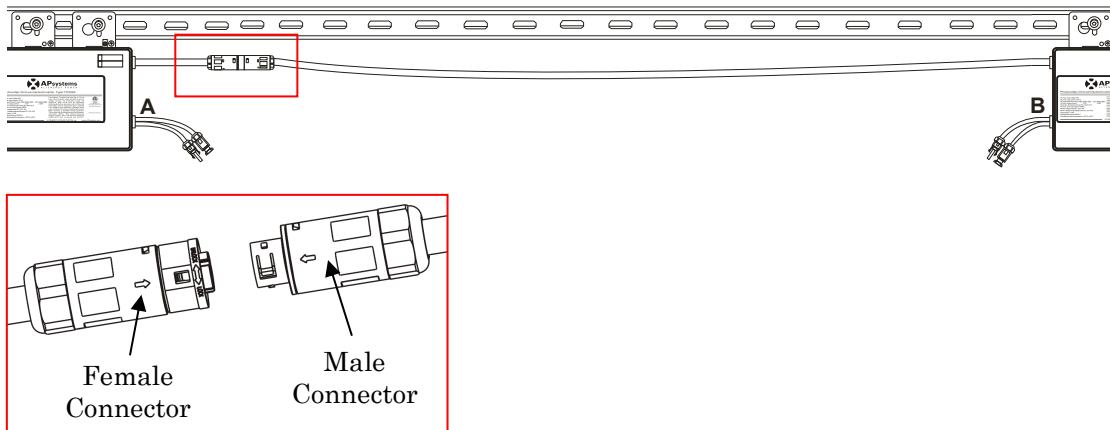


Figure 7

*Best Practice: Use screwdriver to split the Main connectors.*

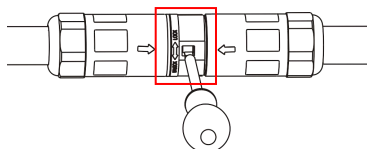


Figure 8

- Check the Microinverter technical data page (P.18) for the maximum allowable number of Microinverters on each AC branch circuit.
- Plug the AC female connector of the first Microinverter into the male connector of the next Microinverter, and so on, to form a continuous AC branch circuit.
- Install a protective end cap on the open AC connector of the last Microinverter in the AC branch circuit.

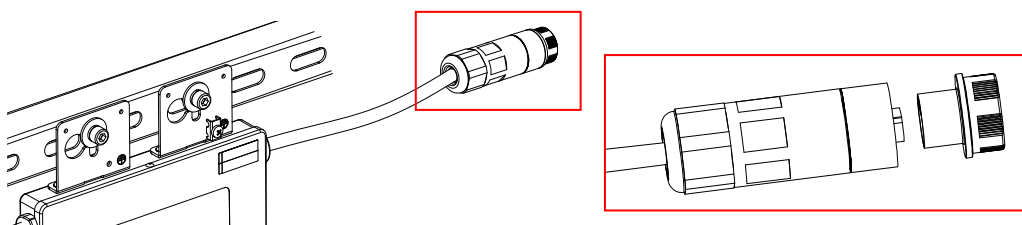


Figure 9

AC connector interface as follows.

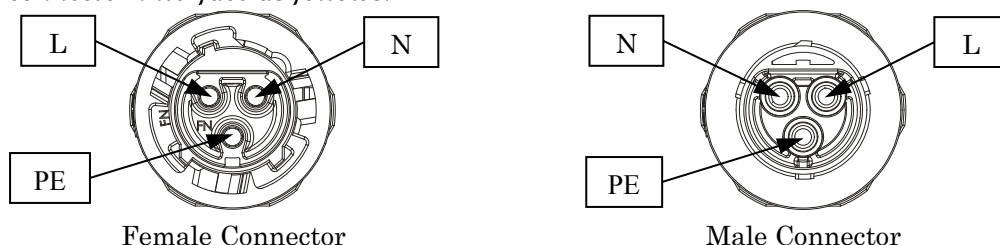


Figure 10

**WARNING:** Do NOT exceed maximum number of Microinverters in an AC branch circuit, as displayed on the Technical Data page (p.18) of this manual.



**NOTE:** Please contact with ALTENERGY POWER SYSTEM Inc for the purchase of AC extended cables when microinverters which are installed space far and AC cable is not long enough.



# Installation Procedures

## Step 4 - Connecting APsystems Microinverters to the PV Module

Connect the DC cables from the PV Modules to the Microinverter per the diagram below:

**NOTE:** When plugging in the DC cables, the Microinverter should immediately blink green three times. This will happen as soon as the cables are plugged in and will show that the Microinverter is functioning correctly. This entire check function will start and end within 5 seconds of plugging in the unit, so pay careful attention to these lights when connecting the DC cables.

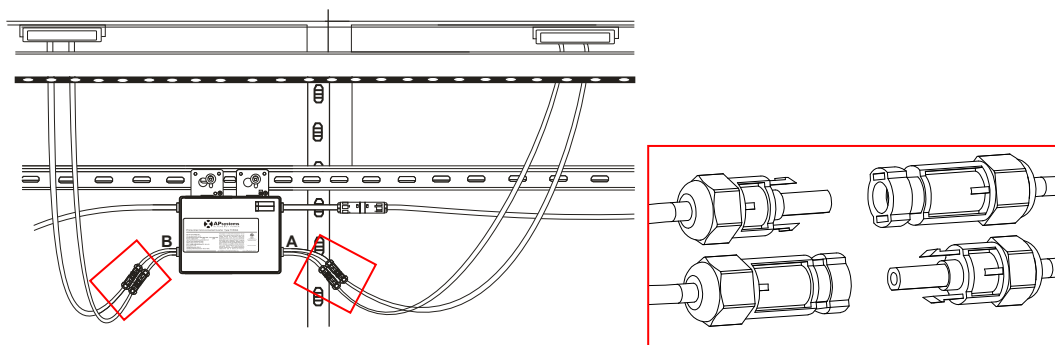


Figure 11

**WARNING:** Insure that all AC and DC wiring is correct. Check that none of the AC and DC wires are pinched or damaged. Be sure that all junction boxes are properly closed.



**NOTE:** About A and B Sides corresponding the location of modules, EMA registration show acquiesce in this installation. if there are different connection methods, please email the detail installation drawings to us to register, or the A, B Sides corresponding component location will not correspond to the EMA position.



# Installation Procedures

## Step 5 - Completing the APsystems Installation Map

Fill in the APsystems Registration Cards, which provide system information and the installation map. Feel free to provide your own layout if a larger or more intricate installation map is required. The layout map provided is designed to accommodate labels in vertical or horizontal orientation to meet all the field PV connections.

- Each APsystems Microinverter has removable serial number labels. Peel labels off, affix one to the respective location on the APsystems installation map, and fill in A,B in the label below(as Figure13) according to the layout on the roof(as Figure 12). Then affix another label to the PV module frame which is easy to see. The warranty cards can obtain from the appendix of this manual or APsystems website [www.APsystems.com](http://www.APsystems.com)
- Fill the warranty cards and email to APsystems at [emasupport@altenergy-power.com](mailto:emasupport@altenergy-power.com)
- APsystems will create the EMA account and email you the account information. Then you can use the EMA website to view detailed performance of your PV system. You can learn more information on energy monitoring and analysis system from APsystems website [www.APsystems.com](http://www.APsystems.com)

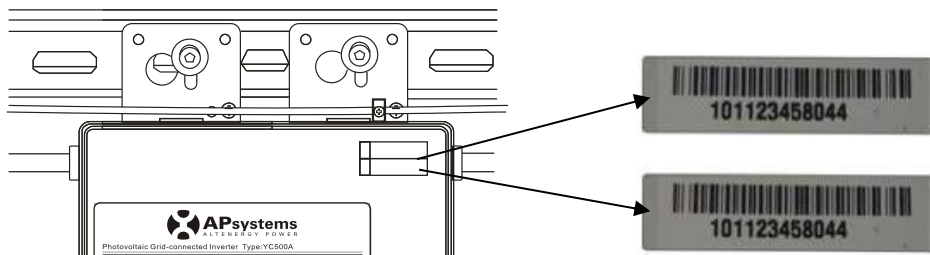


Figure 12

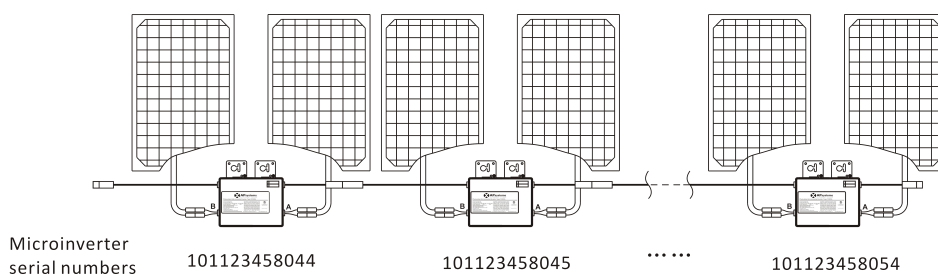


Figure 13

## Installation Procedures

## APsystems Microinverter&Energy Communication Unit Warranty Card

The APsystems Installation Map is a diagram of the physical location of each microinverter in your PV installation. Each APsystems microinverter has a removable serial number label located on the mounting plate. Peel the label and affix it to the respective location on the APsystems installation map.

## Installation Map Template

[illegible]

To register your APsystems microinverter, please mail this warranty registration card to: [emasupport@altenergy-power.com](mailto:emasupport@altenergy-power.com)

Figure 14

**NOTE:**

1. The layout of the inverters' serial numbers on the warranty card is only suitable for general arrangement.
2. Step 1~5 can be done in any order..
3. Warranty card is located in Appendix last page of this manual.
4. You can use Scanning Gun or mobile phone to scan the serial numbers on the map when set ECU (see ECU manual).



# APsystems microinverter system operating instructions

## To operate the ASystems microinverter PV system:

1. Turn ON the AC circuit breaker on each microinverter AC branch circuit.
2. Turn ON the main utility-grid AC circuit breaker. Your system will start producing power after a five-minute waiting time.
3. The units should start blinking green every 2 seconds five minutes after turning on the AC circuit breaker. This means they are producing power normally, but have not yet connected to the ECU. After the ECU has been plugged in and acknowledges the Microinverters, they will start to blink green every 10 seconds.
4. Plug in the ECU and follow the instructions according to the manual for the ECU.
5. The ASystems Microinverters will start to send performance data over power line to the ECU. The time required for all the Microinverters in the system to report to the ECU will vary with the number of Microinverters in the system. You can verify proper operation of the ASystems Microinverters via the ECU. See the ECU Installation and Operation Manual for more information.

---

**NOTE:** Once AC power is applied, about 0.1A current and 25VA(W) power for each microinverter may be measured with a meter. This Current and Power are Reactive. The inverters ARE NOT operating. After an over 300s waiting time, the inverters will start operation.

---



# Troubleshooting

Qualified personnel can use the following troubleshooting steps if the PV system does not operate correctly:

## Status Indications and Error Reporting

### Start up LED

One quick red light followed by three short green blinks when DC power is first applied to the Microinverter indicates a successful Microinverter startup.

### Operation LED

**Flashing Slow Green (10 sec. gap)** - Producing power and communicating with ECU

**Flashing Fast Green (2 sec. gap)** - Producing power and not communicating with ECU over 60mins

**Flashing Red** - Not producing power

### Other Faults

All other faults are reported to the ECU. Refer to the ECU Installation and Operation Manual for a list of additional faults and troubleshooting procedures.

---

**WARNING:** Only qualified personnel should directly handle the APsystems microinverter.

---



---

**WARNING:** Never disconnect the DC wire connectors under load. Ensure that no current is flowing in the DC wires prior to disconnecting. An opaque covering may be used to cover the module prior to disconnecting the module.

---



---

**WARNING:** Always disconnect AC power before disconnecting the PV module wires from the APsystems microinverter. Either disconnecting by the appropriate AC circuit breaker or unplugging the first AC connector of the first Microinverter in a branch circuit is suitable as a means of disconnection.

---



---

**WARNING:** The APsystems microinverter is powered by PV module DC power. AFTER disconnecting the DC power, when reconnecting the PV modules to the Microinverter, be sure to watch for the three short LED flashes.

---





## Troubleshooting a non-operating APsystems Microinverter

There are two possible overall areas of trouble:

- A. The Microinverter itself may be having problems.
- B. The Microinverter itself is working fine but it is having trouble communicating with the ECU. The items below refer to Microinverter issues, not communication issues (addressed in the ECU manual).

A quick way to tell whether the issue is the Microinverter or a communication problem with the ECU:

1. **Diagnosing from the Microinverter:** A red light – either blinking or solid on the Microinverter, or no light at all. No light, or a red light, means it is definitely a Microinverter problem.
2. **Diagnosing from the ECU:**
  - a. **No-Data-Display:** This is probably a communication issue- not a Microinverter problem.
  - b. **Problems with erratic display:** Data is displayed for some period and then no data is displayed: most likely a communication issue.
  - c. **0 watts, or 2 watts:** Possibly a Microinverter problem
  - d. **Erratic data display** that is not coordinating with data displays from other units: most likely a Microinverter problem.

**To troubleshoot a non-operating APsystems Microinverter, Follow the steps below in order:**

1. Verify the utility voltage and frequency are within ranges shown in the Technical Data section of this manual.
2. Check the connection to the utility grid. Verify utility power is present at the inverter in question by removing AC, then DC power. **Never disconnect the DC wires while the microinverter is producing power.** Re-connect the DC module connectors and watch for three short LED flashes.
3. Check the AC branch circuit interconnection between all the microinverters. Verify each inverter is energized by the utility grid as described in the previous step.
4. Make sure that any AC breaker are functioning properly and are closed.
5. Check the DC connections between the microinverter and the PV module.
6. Verify the PV module DC voltage is within the allowable range shown in the Technical Data of this manual.
7. If the problem persists, please call APsystems Customer Support.

---

**WARNING:** Do not attempt to repair the APsystems microinverter. If troubleshooting methods fail, please return the microinverter to your distributor for replacement.

---



# Replace a microinverter

## Follow the procedure to replace a failed APsystems Microinverter.

- A. Disconnect the APsystems Microinverter from the PV Module, in the order shown below:
  - 1. Disconnect the AC by turning off the branch circuit breaker.
  - 2. Disconnect the first AC connector in the branch circuit.
  - 3. Disconnect the PV module DC wire connectors from the microinverter.
  - 4. Remove the Microinverter from the PV array racking.
  - 5. Cover the module with an opaque cover.
- B. Install a replacement Microinverter to the rack. Remember to observe the flashing LED light as soon as the new Microinverter is plugged into the DC cables.
- C. Connect the AC cable of the replacement Microinverter and the neighboring Microinverter to complete the branch circuit connections.
- D. Close the branch circuit breaker, and verify operation of the replacement Microinverter.

## Technical Data

---

**WARNING:** Be sure to verify the voltage and current specifications of your PV module match with those of the Microinverter. Refer to the APsystems website [www.APsystems.com](http://www.APsystems.com) for a list of approved PV modules.

---



---

**WARNING:** You must match the DC operating voltage range of the PV module with the allowable input voltage range of the APsystems Microinverter.

---



---

**WARNING:** The maximum open circuit voltage of the PV module must not exceed the specified maximum input voltage of the APsystems

---



# APsystems YC250A/I Microinverter Datasheet

## Input Data (DC)

Recommended PV Module Power (STC)Range	180W-310W
MPPT Voltage Range	22V-45V
Operation Voltage Range	16V-52V
Maximum Input Voltage	55V
Startup Voltage	22V
Maximum Input Current	10.5A

## Output Data (AC)

Nominal Output Voltage	127V	220V
Maximum Continuous Output Power	250W	250W
Nominal Output Current	1.97A	1.14A
Default Output Voltage Range	95V-155V*	181V-264V*
Extended Output Voltage Range	82V-155V	181V-298V
Nominal Output Frequency	60Hz	
Default Output Frequency Range	57Hz-62Hz*	
Extended Output Frequency Range	55.1Hz -64.9Hz	
Power Factor	>0.99	
Total Harmonic Distortion	<3%	
Maximum Units per Branch	8 for 20A Breaker** 10 for 25A Breaker**	14 for 20A Breaker** 17 for 25A Breaker**

## Efficiency

Peak Efficiency	95.5% (HF Transformer Isolation)
Night Power Consumption	120mW

## Mechanical Data

Operating Ambient Temperature Range	-40 °F to +149 °F (-40°C to +65°C )	
Storage Temperature Range	-40 °F to +185 °F (-40°C to +85°C )	
Dimensions (W x H x D)	160mm x 150mm x 29mm (6.3" x 5.9" x 1.1")	
Weight	3.3lbs/1.5kg	
AC CABLE	12AWG	
Enclosure Rating	NEMA 4X	NEMA 6
Cooling	Natural Convection	

## Features & Compliance

Communication	Power line	
Design Lifetime	25yrs	
Monitoring	Life monitoring via EMA software	
Compliance	NOM	FCC Part15; ANSIC63.4;ICES-003; UL1741,CSA C22.2 No.107.1-01;IEEE1547

Specifications subject to change without notice - please ensure you are using the most recent update found at [www.APsystems.com](http://www.APsystems.com)

\*Programmable through ECU to meet customer need.

\*\* Depending on the local regulations.

© All Rights Reserved

# APsystems YC500A/I Microinverter Datasheet

## Input Data (DC)

Recommended PV Module Power (STC)Range	180W-310W	
MPPT Voltage Range	22V-45V	
Operation Voltage Range	16V-52V	
Maximum Input Voltage	55V	
Startup Voltage	22V	
Maximum Input Current	10.5A x 2	12A x 2

## Output Data (AC)

Nominal Output Voltage	127V	220V
Maximum Continuous Output Power	450W	500W
Nominal Output Current	3.54A	2.27A
Default Output Voltage Range	95V-155V*	181V-264V*
Extended Output Voltage Range	82V-155V	181V-298V
Nominal Output Frequency	60Hz	
Default Output Frequency Range	57Hz-62Hz*	
Extended Output Frequency Range	55.1Hz -64.9Hz	
Power Factor	>0.99	
Total Harmonic Distortion	<3%	
Maximum Units per Branch	4 for 20A Breaker** 5 for 25A Breaker**	7 for 20A Breaker** 8 for 25A Breaker**

## Efficiency

Peak Efficiency	95.5% (HF Transformer Isolation)
Night Power Consumption	120mW

## Mechanical Data

Operating Ambient Temperature Range	-40 °F to +149 °F (-40°C to +65°C )	
Storage Temperature Range	-40 °F to +185 °F (-40°C to +85°C )	
Dimensions (W x H x D)	221mm x 167mm x 29mm (8.7" x 6.6" x 1.1")	
Weight	5.5lbs/2.5kg	
AC CABLE	12AWG	
Enclosure Rating	NEMA 4X	NEMA 6
Cooling	Natural Convection	

## Features & Compliance

Communication	Power line	
Design Lifetime	25yrs	
Monitoring	Life monitoring via EMA software	
Compliance	NOM	FCC Part15; ANSIC63.4;ICES-003; UL1741,CSA C22.2 No.107.1-01;IEEE1547

Specifications subject to change without notice - please ensure you are using the most recent update found at [www.APsystems.com](http://www.APsystems.com)

\*Programmable through ECU to meet customer need.

\*\* Depending on the local regulations.

© All Rights Reserved

## Wiring Diagram

## Sample Wiring Diagram - 127V Single Phase

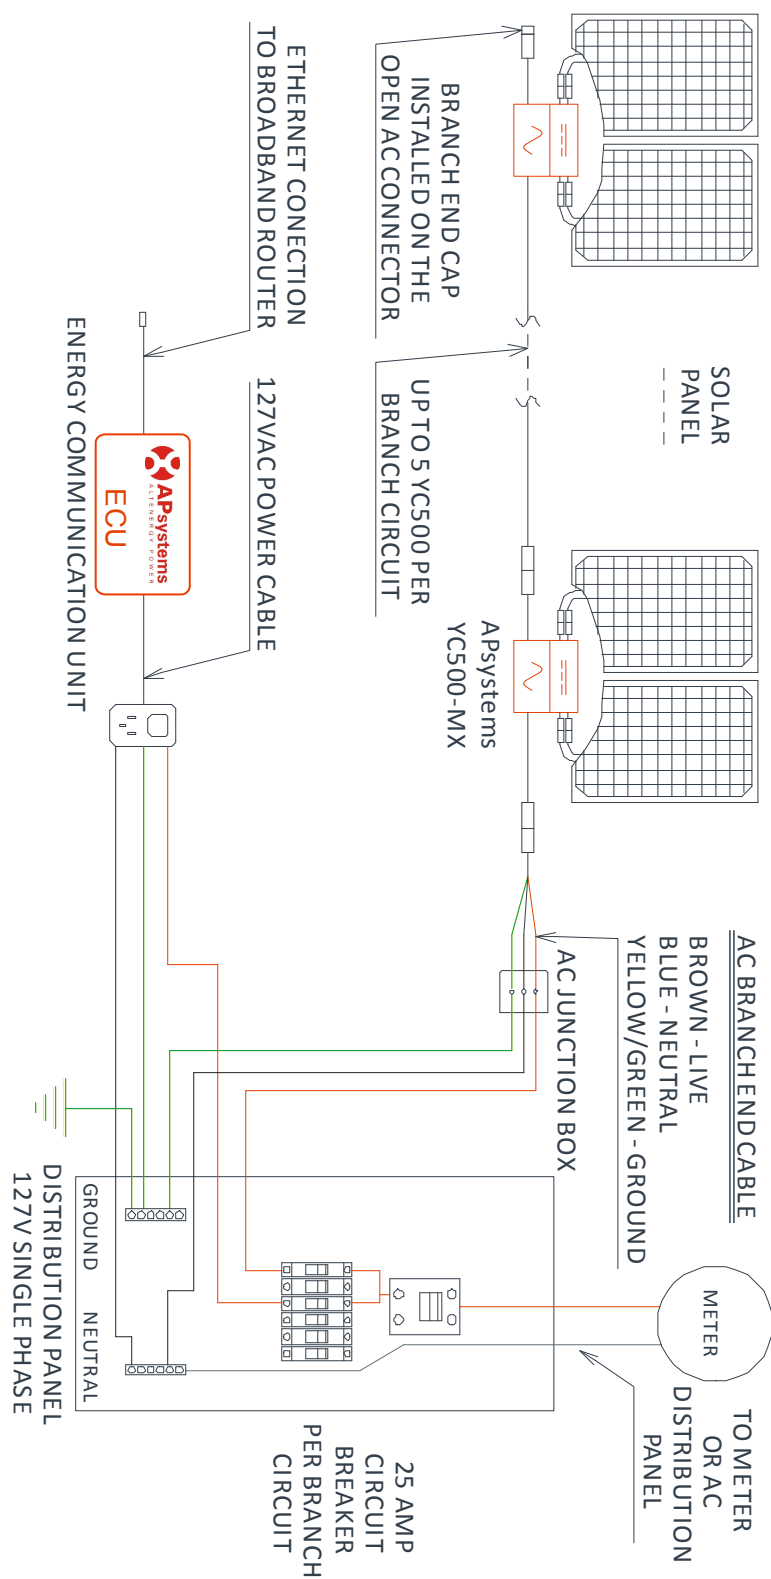


Figure 15

## Wiring Diagram

## Sample Wiring Diagram - 220V Single Phase

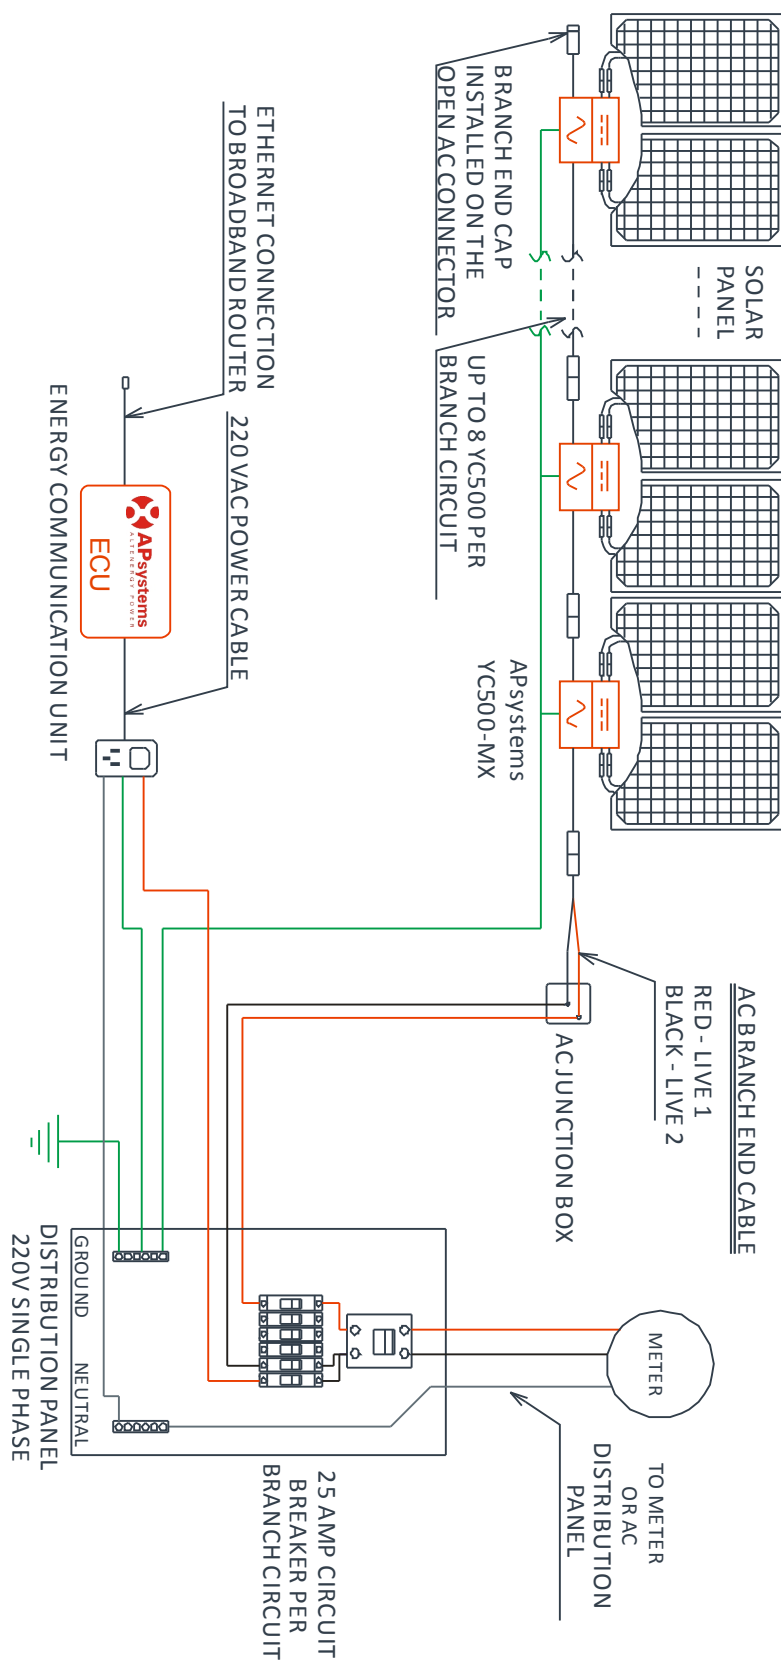


Figure16

**NOTE:** Neutral Line (WHITE - Neutral) do not connect when the system is 220V single phase.



# Wiring Diagram

## Sample Wiring Diagram - 110V/220V Split Phase

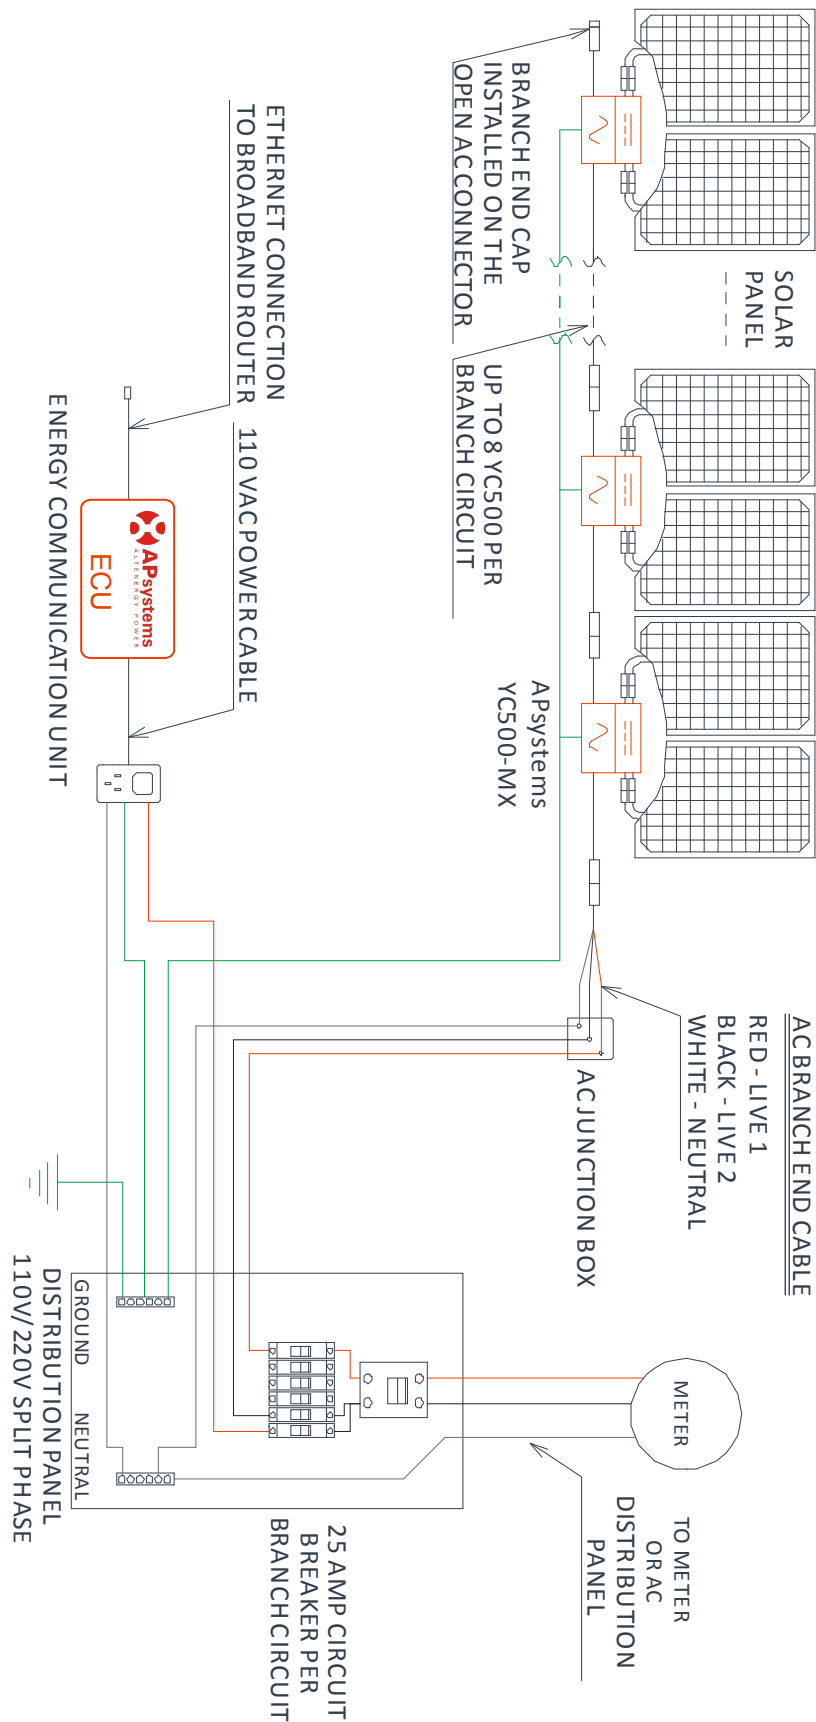


Figure 17



# Wiring Diagram

## Sample Wiring Diagram - 127V/220V Three Phase

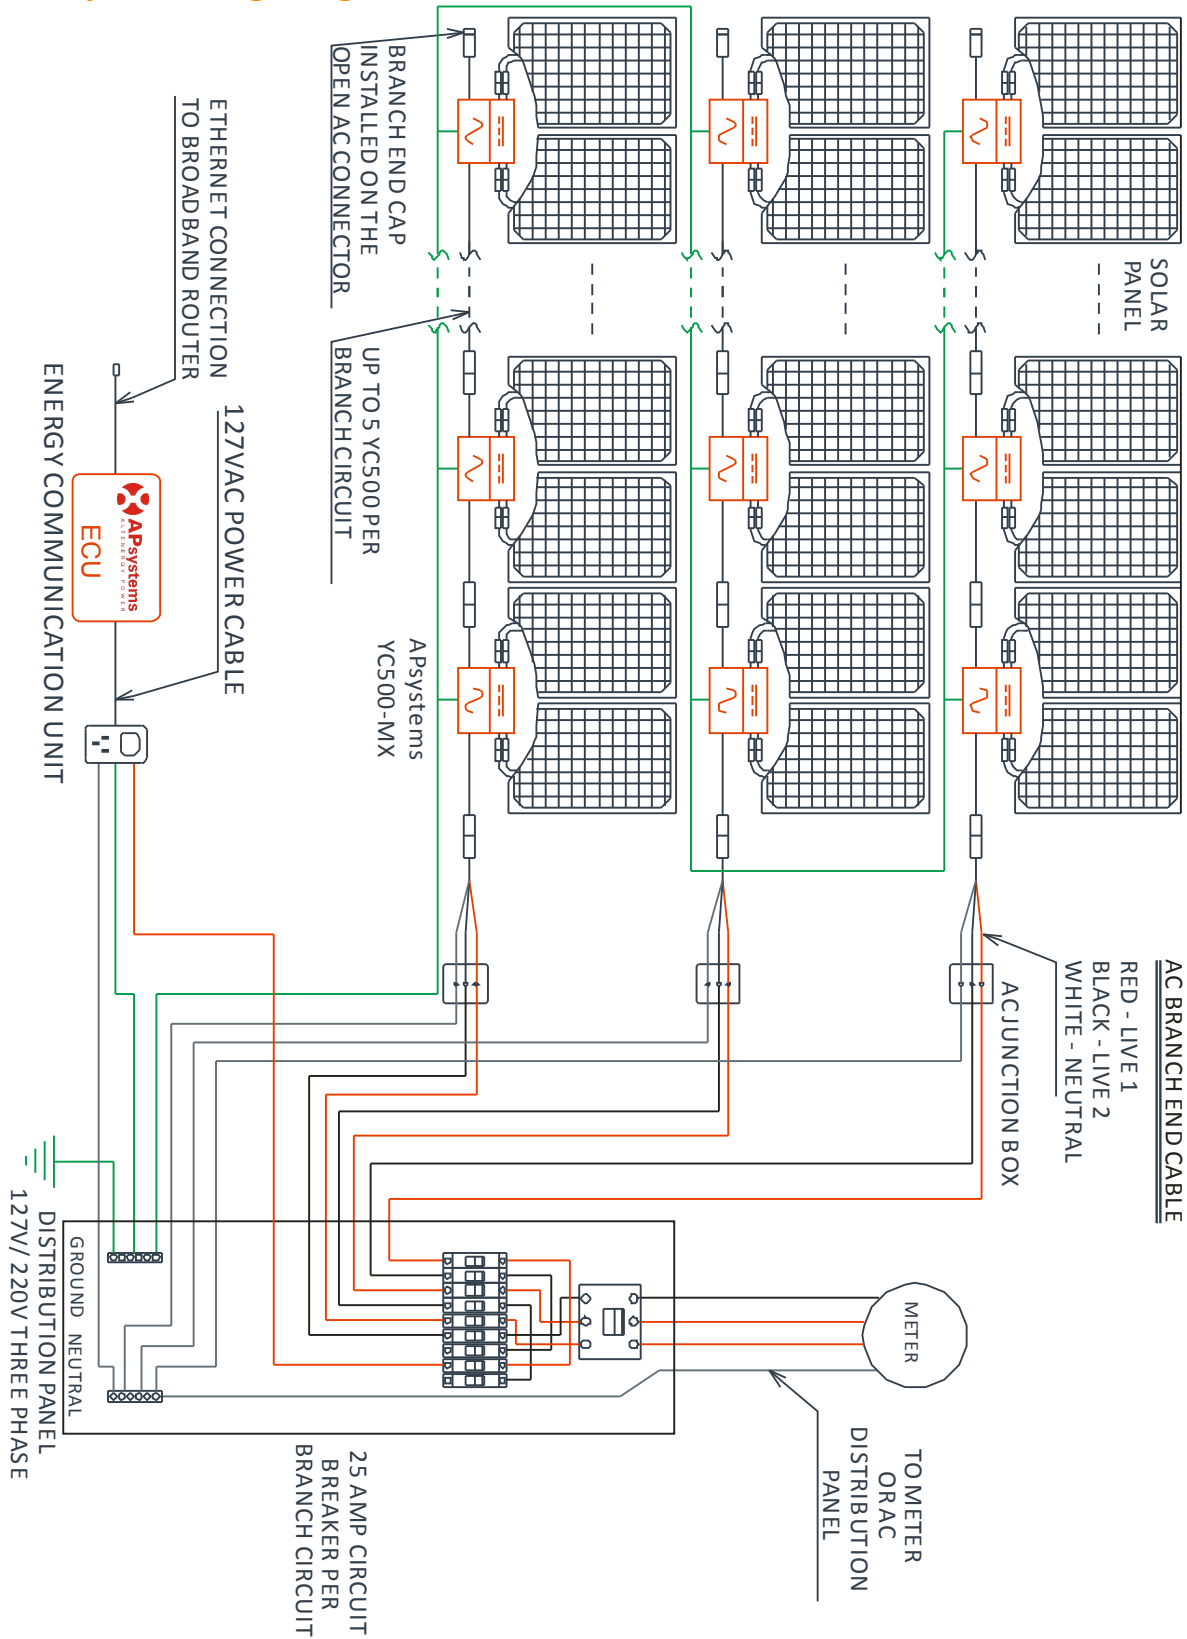


Figure 18

# APsystems Microinverter & Energy Communication Unit

## Warranty Card

The Apsystems Installation Map is a diagram of the physical location of each microinverter in your PV installation. Each Apsystems microinverter has a removable serial number label located on the mounting plate. Peel the label and affix it to the respective location on the Apsystems installation map.

Installation Map Template

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22

To register your Apsystems microinverter, please mail this warranty registration card to: [emasupport@altenergy-power.com](mailto:emasupport@altenergy-power.com)